# **Quick Start Guide**

» Berry+ Freedom AC1200 Dual-Band LTE Wi-Fi Router

REV.1








## In the box

- 1 x LTE Wi-Fi Router 1
- x Power Adapter
- 1 x RJ45 Ethernet Cable
- 1 x Quick Start Guide



# **Hardware Overview**

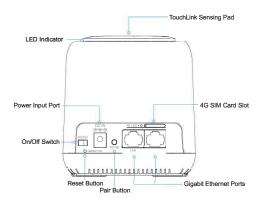

# **Default Parameters**

Default IP: 192.168.10.1

Login: http://theberryplus.setup

Login Password: admin

2.4G/5G SSID: Berry+Mesh Prime XXXX

Password-free SSID:

Berry+Mesh\_Connect\_XXXX

# Reset Button:

Press and hold 6 seconds to reset the mesh device

# Pair Button:

Press and hold for 2 seconds to add an extra mesh device to the existing Everything Mesh Wi-Fi system.

\* Mesh network system supports up to 10 units


of mesh devices

| LED State         | Description   |
|-------------------|---|
| Solid purple      | The device is being activated.  |
| Solid blue        | The Internet is connected.  |
| Blue flashing     | Password free wi-fi connection is in progress.     The device is pairing with other Mesh devices. |
| Slow red flashing | No access to the Internet.  |
| Fast red flashing | The device is disconnected.   |

# PRODUCT INSTALLATION

# 1. Inserting the SIM card

Carefully slide the 4G SIM card into the card slot until it clicks into place.

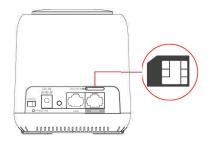

# 2. Connecting the router

#### 2.1 Via Wireless

Turn on your Wi-Fi, search SSID of this product on your devices (smartphone, tablet computer, laptop, etc.), and connect to it; then you can start configuring.



For Windows users



For Mac users

# **Password Free Secure WiFi Access**

# Touch and Connect | Make Sharing Easy

1. Touch the sensing area, it indicates that users can connect to WiFi without any password in two minutes (default) when the top LED light flashes

#### X How to set up

Wi-Fi  $\rightarrow$  TouchLink  $\rightarrow$  Timer(Second) select from 30 to 200 seconds.




2. Select a network with " Connect" in it, then confirm the connection.



Note: This works for any smartphone, Pad, laptop etc.


#### 2.2 Via Cable

Connect Ethernet cable to your PC/laptop and device LAN port, then you can start configuring.

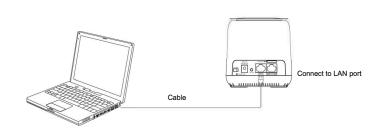


#### CONFIGURATION

Launch a web browser and type <a href="http://theberryplus.setup">http://theberryplus.setup</a> or
 192.168.10.1 in the address field. The default password is admin.

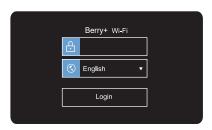

Note: If the login window does not pop up, please refer to the FAQ>Q1.

 After login, select "Country/Region" and "Time Zone" respectively, and then create a new login password following the rules accordingly. Click "Save" to proceed.

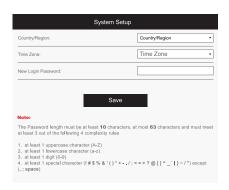

Note: Log in with your new password next time.

- Proceed to Router Wizard section, and select the "WAN Type" that's fit for your need.
- 3.1 4G/LTE (For Mobile Network)
- Choose 4G/LTE WAN Type, and for Mobile Network Mode, select AUTO MODE(4G/3G/2G) .
- APN Settings: Select AUTO or MANUAL. If you choose MANUAL, you will have to enter the APN details for your particular n &work. If in doubt, your network provider will supply you with the necessary details.
- You can change the 2.4G and 5G SSID or use the default one.
   As for Security Type, "WPA2-PSK" is usually recommended.
   For your network security, please create a new Wi-Fi Password according to the rules.
- Finally, click "Apply" and wait for the installation process to complete.

#### Wizard Router Wizard This device connects as a router to a modem or another router through the WAN port. WAN Type: 4G/LTE Mobile Network Mode: AUTO MODE(4G/3G/2G) APN Settings: AUTO 2.4G SSID: Berry+Mesh Prime XXXX 5G SSID: Berry+Mesh Prime XXXX Security Type: WPA2-PSK Wi-Fi Password: \*\*\*\*\*\*

#### 3.2 WAN (Ethernet) (For Ethernet Network)

Choose WAN (Ethernet) WAN Type, and for WAN (Ethernet)
 Mode, select DHCP.

Apply

- You can change the 2.4G and 5G SSID or use the default one.
   As for Security Type, "WPA2-PSK" is usually recommended.
   For your network security, please create a new Wi-Fi Password according to the rules.
- Finally, click "Apply" and wait for the installation process to complete.

| Router Wizard  |                       |   |  |  |
|--|-----------------------|---|--|--|
| This device connects as a router to a modem or another router through the WAN port |                       |   |  |  |
| WAN Type:  | WAN(Ethernet)         | , |  |  |
| WAN(Ethernet) Mode:  | DHCP                  | , |  |  |
| 2.4G SSID:   | Berry+Mesh_Prime_XXXX |   |  |  |
| 5G SSID:   | Berry+Mesh_Prime_XXXX |   |  |  |
| SecurityType:  | WPA2-PSK              |   |  |  |
| Wi-Fi Password:  | •••••                 |   |  |  |

Which WAN (Ethernet) Mode should I choose?

If you use DSL line and you are only provided an account name and a password by your ISP, choose PPPoE. If you use cable TV or fiber cable, choose DHCP(Dynamic IP). If you are provided information such as IP address, Subnet Mask and Default Gateway, choose Static IP.

Apply

#### 3.3 Both WAN/4G (For Mobile and Ethernet Network)

- -Choose **Both WAN/4G WAN Type**, and you can prioritize the WAN or 4G network according to your needs.
- -Select your WAN (Ethernet) Mode and Mobile Network Mode.
- APN Settings: Select AUTO or MANUAL. If you choose MANUAL, you will have to enter the APN details for your particular network. If in doubt, your network provider will supply you with the necessary details.
- You can change the 2.4G and 5G SSID or use the default one.
   As for Security Type, "WPA2-PSK" is usually recommended.
   For your network security, please create a new Wi-Fi Password according to the rules.
- Finally, click "Apply" and wait for the installation process to complete.

| Router Wizard  |                       |   |  |  |
|--|-----------------------|---|--|--|
| This device connects as a router to a modem or another router through the WAN port |                       |   |  |  |
| WAN Type:  | Both WAN/4G           | , |  |  |
| Acces Priority:  | WAN(Ethernet)         | , |  |  |
| WAN(Ethernet) Mode:  | DHCP                  | , |  |  |
| Mobile Network Mode:   | AUTO MODE(4G/3G/2G)   |   |  |  |
| APN Settings:  | AUTO                  | , |  |  |
| 2.4G SSID:   | Berry+Mesh_Prime_XXXX |   |  |  |
| 5G SSID:   | Berry+Mesh_Prime_XXXX |   |  |  |
| Security Type:   | WPA2-PSK              | , |  |  |
| Wi-Fi Password:  | *******               |   |  |  |

4. Check the connection by clicking on the "Status" on the menu.

Apply





# FAQ (Frequently Asked Questions)

# Q1. Why doesn't the login page appear after entering http://theberryplus.setup ?

- · Make sure your computer is set to obtain an IP address automatically.
- Verify if http://theberryplus.setup is correctly entered in the web browser.
   Alternatively, enter http://192.168.10.1 in the web browser.
- · Use another web browser and try again.
- · Reboot your device and try again.

#### Q2. What can I do if I cannot access the Internet?

- Check if the Internet is working normally by connecting a computer directly to the modern using an Ethernet cable. If it is not, contact your Internet service provider.
- Open a web browser, enter http://theberryplus.setup or http://192.168.10.1 and run the quick setup again.
- · Reboot your device and try again.

#### Q3. How can I restore the mesh device to its factory default settings?

 While the device is powered on, press and hold the Reset button on the back for 6 seconds

### Q4. What can I do if I forget my Administration Management password?

Refer to FAQ > Q3 to reset the device, and the use the default admin (all lowercase)
 to log in

## Q5. What can I do if I forget my wireless network password?

Log in the device's web management page at <a href="http://theberryplus.setup">http://theberryplus.setup</a>
 and go to Wi-Fi -> Wi-Fi Configuration, you can find your Wi-Fi password here.

#### Q6. How to place the mesh device to get the best Wi-Fi signal?

Keep the mesh devices in the relatively central spot in your home and away from
anything that might block its signal such as metal objects, bodies of water, reinforced
concrete walls, foil-insulated walls, and other similar construction materials because
they may severely weaken the wireless signal.

# **GNU General Public License Notice**

This product includes software codes developed by third parties. These software codes are subject to either the GNU General Public License (GPL), Version 2.1, June 1991 or the GNU Lesser General Public License (LGPL), Version 2.1, February 1999. You can copy, distribute, and/or modify in accordance with the terms and conditions of GPL or LGPL. The source code should be complete, if you want us to provide any additional source code flies under GNU General Public License (GPL), please contact us in these matters. We are committed to meeting the requirements of the GNU General Public License (GPL), You are welcome to contact us ocal office to get the corresponding software and licenses. Please inform us your contact details (full address)and the product code. We will send you a software package with the software and license for free. The respective programs are distributed WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

Please refer to the GNU General Public LicenseWeb site for further information. http://www.gnu.org/licenses/old-licenses/lgpl-2.0.html

http://www.gnu.org/licenses/gpl.html

# WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.